

# **IMPORTANT!**

The following pages contain important safety and operating instructions. Please read and follow all instruction in this manual. Carefully read and review all safety instructions, warnings and cautions contained in this manual. Failure to read and follow these instructions, warnings and cautionary statements may result in severe injury or death to persons and pets or damage to personal property.



Do not dispose product or any other part of it as unsorted municipal waste – instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment.



## **INSTRUCTION MANUAL**

### **6 INCH 2 SPEED CLIP FAN**



**READ AND SAVE THESE INSTRUCTIONS**

**IMPORTANT SAFEGUARD INSTRUCTIONS**

## WARNING:

**When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electrical shock and injury to persons, including the following:**

1. Make certain the power source conforms to the electrical requirements of the Fan.
2. Make certain that the room is equipped with a working smoke detector.
3. Use this Fan only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electrical shock, or injury to persons.
4. To reduce the risk of personal injury and electric shock, the Fan should not be played with or placed where small children can reach it.
5. Unplug power cord before installing, servicing, or moving the Fan.

**DO NOT DEPEND ON THE ON/OFF SWITCH AS THE SOLE MEANS OF DISCONNECTING POWER WHEN SERVICING OR MOVING THE FAN. ALWAYS UNPLUG THE POWER CORD. ALWAYS TURN OFF AND UNPLUG FAN BEFORE LEAVING THE AREA. NEVER LEAVE CHILDREN UNATTENDED WHEN THE FAN IS ON OR PLUGGED IN.**

6. This Fan must **NOT** be used in potentially dangerous locations such as flammable, explosive, chemical-laden or wet atmospheres where gasoline, paint or flammable liquids are used or stored.

7. **DO NOT** use Fan in or near a window. Rain may create an electrical hazard.

8. Completely assemble Fan, according to instructions, before connecting to power supply.

**This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. Match wide blade of plug to wide slot. Fully insert. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. DO NOT attempt to defeat this safety feature. This plug is a safety feature, to reduce the risk of fire, electric shock and personal injury. DO NOT remove, replace, repair or tamper with the originally supplied plug.**

9. Where possible, avoid the use of extension cords because the extension cord may overheat and cause a fire. If you must use an extension cord, minimize the risk of overheating by using the shortest cord possible and ensuring that it is UL listed. **NEVER** use a single extension cord to operate more than one Fan. Do not plug Fan into any other cord connected device, such as a power strip, cord reel, surge protector, multiple outlet adapters or outlet-type air fresheners.

## 1 Year Limited Warranty Service

If the product will not work after you have read the troubleshooting guide and practiced the troubleshooting options, you are advised to return the Hydro Crunch™ product to the retailer you purchased it from. The dealer will be able to examine the product and test its components. If they are not able to repair the product, they will return it to us for examination and repair/replacement. Do not attempt to repair any product on your own, as serious injury or death may result. If the retailer is not able to help you and the product is still under manufacturer's warranty, you may contact us for technical support. In some cases, you will be issued an RMA# (return merchandise authorization number) to return the unit for factory repair. Complete the warranty form below and return the product with all original packaging, your receipt of purchase, and a valid RMA# to the address below. Please pack and ship the product in its original packaging. If it is damaged in shipment we cannot be responsible and the warranty may be voided. Once we receive RMA package, it will be repaired or replaced and shipped back to you. Please note if an additional warranty was purchased and include the extended warranty sales receipt with your return.

## RETURN FORM

**Include the following if returning:**

- ✓ Proof of purchase
- ✓ This completed form
- ✓ RMA# on the outside of the box
- ✓ Extended warranty receipt

**Return Merchandise Authorization Number (Required):** \_\_\_\_\_

**Contact Name:** \_\_\_\_\_

**Address:** \_\_\_\_\_

**Phone #:** \_\_\_\_\_

**Email Address:** \_\_\_\_\_

**Please give a brief description of your technical issue:** \_\_\_\_\_

\_\_\_\_\_

## SEND TO:

Hydro Crunch

17128 Colima Road Suite 510

Hacienda Heights, CA 91745

714-516-8176

## MAIN SPECIFICATIONS

Rated Voltage: 120V

Rated Frequency: 60Hz

Rated Power: 15W



### DISPOSAL

Do not dispose product or any other part of it as unsorted municipal waste – instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment.

The use of such devices may create a fire hazard.

10. **NEVER** operate any Fan with a damaged cord or plug or after the Fan malfunctions, has been dropped or damaged in any manner. There are no user serviceable parts. Return Fan to an authorized service facility for examination, electrical or mechanical adjustment or repair.

11. **NEVER** insert or allow fingers or foreign objects to enter any ventilation or exhaust opening as it may cause an electric shock or fire, or damage the Fan. To reduce the risk of fire, **DO NOT** block or tamper with the Fan in any manner while it is in operation.

12. Locate the Power Cord so the Fan or other objects are not resting on it. **DO NOT** run Power Cord under carpeting. **DO NOT** cover Power Cord with throw rugs, runners or the like. Arrange Power Cord away from room traffic and where it will not be tripped over.

13. This Fan is not intended for use in wet or damp locations. Never locate a Fan where it may fall into a bathtub or other water container. **NEVER** use Fan where flammable liquids are used or stored.

14. **NEVER** use Fan outdoors.

15. This Fan is not suitable for use in agricultural facilities including areas where livestock, poultry or other animals are confined.

16. This Fan is not suitable for use in hazardous locations.

 
## WARNING

**REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK - DO NOT USE THIS FAN WITH ANY SOLID STATE SPEED CONTROL DEVICES.**

## READ AND SAVE THESE INSTRUCTIONS

## PARTS DIAGRAM

- 1 Front Guard
- 2 Fan Blade
- 3 Rear Guard
- 4 Motor Housing
- 5 Speed Control Switch
- 6 Pivot Screw
- 7 Power Cord
- 8 Clip

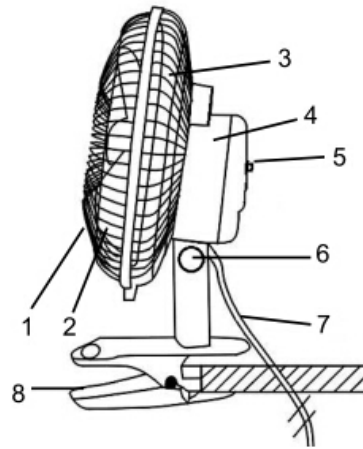

## FUNCTION

 
- 2-Speed settings
- Multi-directional airflow

## ASSEMBLY

**Check to see that you have received all the following parts.**

Fan Head Assembly:

Insert the FAN HEAD into the top of the CLIP until fully seated and tighten the FAN ANGLE ADJUSTMENT (see Fig.2)

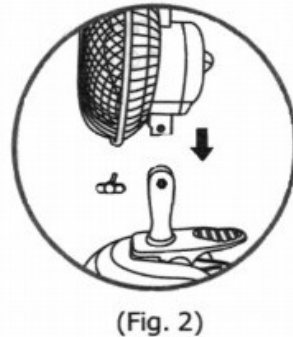

(Fig. 2)

## OPERATING INSTRUCTIONS


1. Plug into any standard 120V AC, 60 Hz outlet.
2. Clip the Fan to a flat structure that is between 1/4" and 1-3/4" thick or a pole 1/2" to 1-3/4" diameter. Clipping the Fan to structures with greater or lesser widths may lead to instability.
3. **TO CONTROL THE FAN SPEED:** Turn the Knob at the rear of the Motor Cover.
  - Speed-1---Low
  - Speed-2---High
  - Speed-0---Off

4. The fan can be adjusted through 360 degrees on its central pillar (see fig 5)
5. The fan can be adjusted through 45 degrees vertically (see fig 4)
6. The fan can be clipped to flat boards (see fig 3)

**TO ADJUST HEAD ANGLE:** Loosen Knob under Fan Head. Tilt head to desired air flow position. **Retighten Knob.**



 (Fig. 3)

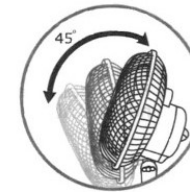

(Fig. 4)



(Fig. 5)

## MAINTENANCE & STORAGE

To reduce the risk of electrical shock and fire please observe the following instructions:

- Always unplug the cord before moving, servicing or cleaning.
- Never place the Fan in or near water.
- TO CLEAN: UNPLUG FAN! Do not immerse electrical parts in water! Use a soft cloth moistened with mild soap and water solution to clean plastic parts. Wipe off any soap residue. DRY ALL PARTS COMPLETELY BEFORE REASSEMBLING AND RECONNECTING TO POWER SUPPLY.
- NEVER use ALCOHOL or SOLVENTS such as gasoline, benzene, paint thinner, or other harsh cleaners.
- Store the Fan with these instructions, in the original carton in a cool, dry place.

## TROUBLE SHOOTING

1. If you experience any problem with your fan, please return it to its supplier, don't attempt to open the motor housing or any other sealed components.
2. Check your electric cord for wear and tear, if it is damaged, it must be replaced by a qualified electrician it is strongly advised that you do not operate your fan if the electrical cord is damaged.